

WS9004IT – Easy Instructions

Setup:

Please Note – When resetting the unit batteries must be left out for 60 seconds before trying to start it up again.

1. Have both units together (ie. Kitchen Table)
2. Insert batteries into the outdoor transmitter (Lid must be closed firmly)
3. Immediately, within 30 seconds, insert the battery into the main unit; the LCD will briefly light up and a beep will be heard
4. Wait for rain information to display on main unit
 - a. Do not touch any buttons while waiting
 - b. If not displayed as “0” after 3 mins, take ALL batteries out. Wait 60 seconds and start from step 1.

FAQ:

How do I reset the main rainfall counter?

Press and hold the “RESET/+” button for over 4 seconds (1st beep will be heard after 2 seconds and a 2nd beep after 4 seconds once completely reset.)

What do I do if I see dashes (---) instead of a “0”?

You must check the batteries and reset your unit (starting from step 1).