

## WS9008UIT - Easy Instructions

### Setup:

Please Note - When resetting the unit batteries must be left out for 60 seconds before trying to start it up again.

1. Have both units together (ie. Kitchen Table)
  2. Insert batteries into outdoor transmitter
  3. Within 1 minute, insert batteries into main unit (display will briefly light up)
  4. Wait for indoor temperature to displayed
    - a. Do not touch any buttons while waiting.
    - b. If not displayed within 60 seconds, take ALL batteries out. Wait 60 seconds and start from step 1.
  5. Wait for outdoor reception signal to display.
    - a. Do not touch any buttons while waiting.
    - b. If not displayed after 3 mins, take ALL batteries out. Wait 60 seconds and start from step 1.
- \*\* To check outdoor information has been received see below\*\*

### Using the unit:

Press “in/out” button to toggle between:

- Indoor information (“IN” will display on the screen);
- Outdoor information (“OUT” will display on the screen)

Press “min/max” button to toggle between:

- Minimum temperature (“MIN” will display on the screen);
- Maximum temperature (“MAX” will display on the screen)
- The unit will automatically return to “current temperature” after 3-5 seconds.

### FAQ:

How do I reset the indoor min/max records?

When main unit shows indoor display press and hold the “min/max” button for approx 2 seconds (current temp will be new min/max).

How do I reset the outdoor min/max records?

When main unit shows outdoor display press and hold the “min/max” button for approx 2 seconds (current temp will be new min/max).