

## WS9123IT - Easy Instructions

### Setup:

Please Note - When resetting the unit batteries must be left out for 60 seconds before trying to start it up again.

1. Have both units together (ie. Kitchen Table)
2. Insert batteries into outdoor transmitter
3. Within 2 mins, insert batteries into main unit
4. Wait for outdoor information to display on main unit
  - a. Do not touch any buttons while waiting.
  - b. If not displayed within 60 seconds, take ALL batteries out. Wait 60 seconds and start from step 1.

Please Note –You must start at the beginning of the settings and gradually move through each one.

If there is no button activity for approx 5 seconds the screen will return to the normal display and they will need to begin the process again.

5. Hold set button until “12h” starts flashing
6. Press “min/max” button to toggle between “12h” and “24h” mode
7. When desired mode is flashing – Press Set
8. Hours will begin flashing, use “min/max” button to toggle hours
9. When desired hour is flashing – Press Set
10. Minutes will begin flashing, use “min/max” button to toggle minutes
11. When desired minutes are flashing – Press Set

### Using the unit:

Press “min/max” button:

- Once to display the minimum temperature (“MIN” will be displayed along the bottom of the screen);
- Twice to see the maximum temperature (“MAX” will be displayed along the bottom of the screen);
- Again to return to normal display.

Press set button to toggle between transmitters (when more than 1 transmitter in use).

The unit will automatically return to normal display after 3-5 seconds.

### FAQ:

How do I get my main unit to display in °C?

The unit must be set to 24hr time. See instruction 4 + 5

How do I get my outdoor transmitter to display in C°?

Please call our Customer Helpdesk on 1800 653 238