

WS9624IT - Easy Instructions

Setup:

Please Note - When resetting the unit batteries must be left out for 60 seconds before trying to start it up again.

1. Have both units together (ie. Kitchen Table)
2. Insert the batteries into the outdoor transmitter
3. Immediately, within 25 seconds, insert batteries into main unit (LCD will briefly light up). Indoor information should display.
 - a. Do not touch any buttons while waiting
 - b. If indoor information not displayed within 60 seconds, take ALL batteries out. Wait 60 seconds and start from step 1.
4. Wait for outdoor information to display on main unit
 - a. Do not touch any buttons while waiting
 - b. If outdoor information not displayed after 3 minutes, take ALL batteries out. Wait 60 seconds and start from step 1.

Please Note – Once this is all correct you can begin going through the settings. These are done sequentially. You must start at the beginning (LCD Contrast) and gradually move through each one.

If there is no button activity for approx 5 seconds the screen will return to the normal display and you will need to begin the process again.

You can exit the manual setting at anytime by pressing the “CH” button once.

❖ Settings - LCD

1. Press the “SET” button, the LCD contrast setting will begin flashing
2. Press the “ + ” button to toggle between the contrast levels
3. When desired level is flashing – Press “SET”

❖ Then Time/Date Settings

4. Then the **Time Zone** will begin flashing, use the “ + ” button to toggle zones
5. When the desired tone is flashing – Press “SET”
6. Then the **Daylight Savings** will begin flashing, this function is not set up for Australia so please skip this setting – Press “SET”
7. Then “12h” will begin flashing, use the “ + ” key to toggle between **12 or 24 hour** mode
8. When the desired mode is flashing – Press “SET”
9. Then the **hours** will begin flashing, use the “ + ” button to toggle hours
10. When desired hour is flashing – Press “SET”
11. The **minutes** will begin flashing, use the “ + ” button to toggle minutes
12. When desired minutes are flashing – Press “SET”
13. The **year** will begin flashing, use the “ + ” button to toggle between years
14. When desired year is flashing – Press “SET”
15. The **month** will begin flashing, use the “ + ” button to toggle between months
16. When the desired month is flashing – Press “SET”
17. The **day** will begin flashing, use the “ + ” button to toggle between the days
18. When the desired day is flashing – Press “SET”

❖ Then Weather Settings

19. Then °F will begin flashing, use the “ + ” button to toggle between °F and °C

20. When the desired mode is flashing – Press “SET”
21. The **sensitivity value** will begin flashing, use the “+” button to toggle between values
22. When desired value is flashing – Press “SET”
23. The unit will now return to the normal display